


arches


Square



Standard

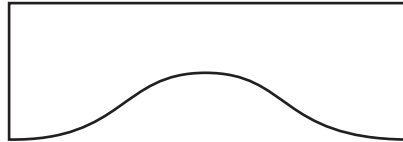

Shallow

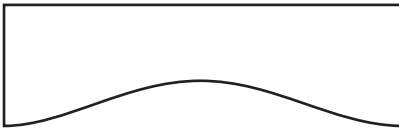


Gentle Arch




"V" Top



Hudson

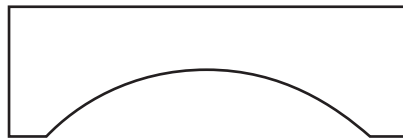

French

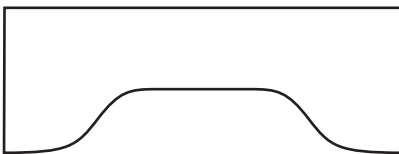

inside


Bead



Ogee



Roundover

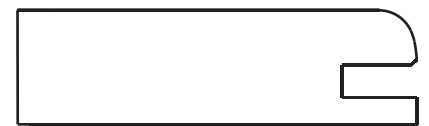

Shaker



Bevel*




*Note: On Bevel V Groove runs through the joint

Cove




Eased Shaker*



*Note: On Eased Shaker V Groove does not run through the joint

Chamfer

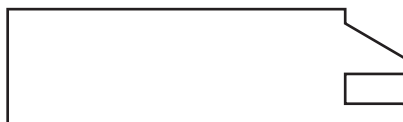

8 Mod



inside

Shaker*



*Note: 1/4" reveal on face.




panel raise

Acadia



Beardsley

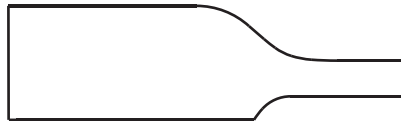

Celtic



Empire



Huguenot



Harvard



Jubilee



JMod




Kipling




Liberty



Normandy

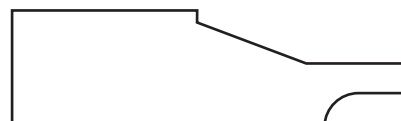


NMod

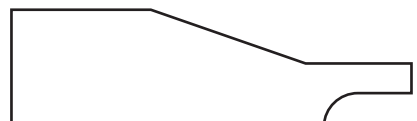

panel raise

Winston

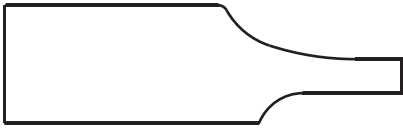

Solid





Solid V Groove



Solid Bead




Plywood






outside


1/4 Cove

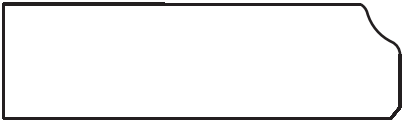

Ogee

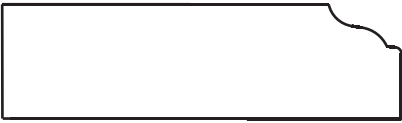

1/4 Roundover

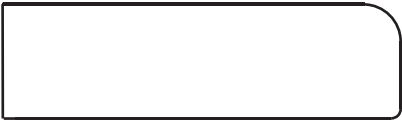

Bead



Eased Bead



1/8 Cove



Bevel



Chamfer



Square




outside

Eased Square




3/8 Roundover




Bullnose




Cove




mitre

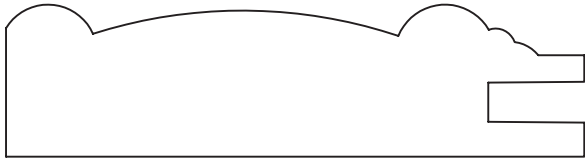


2100

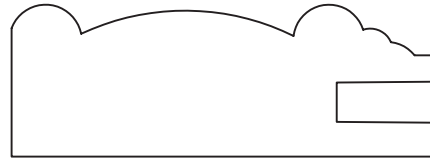


2150

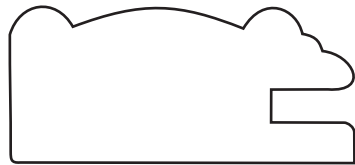


2175

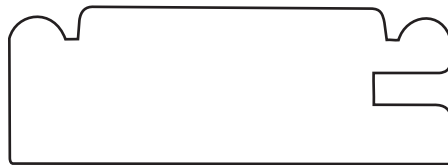


2200

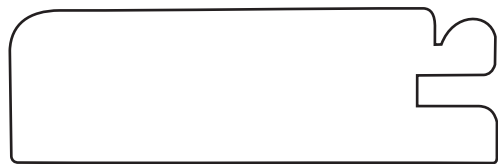


2250

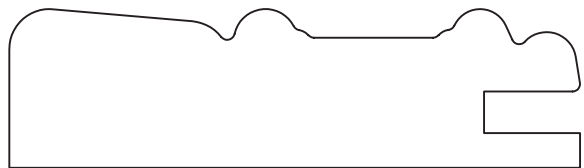

2300

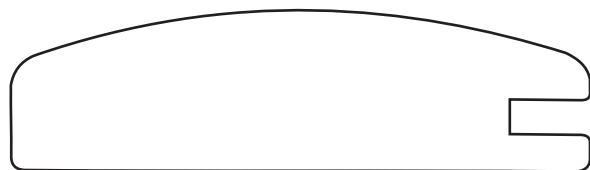


2400

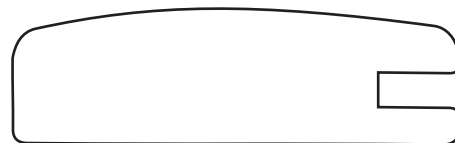


2450


mitre

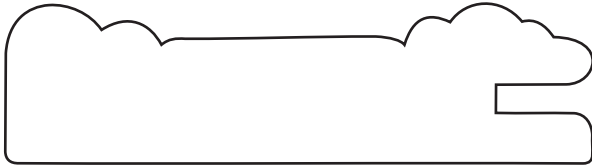


2500

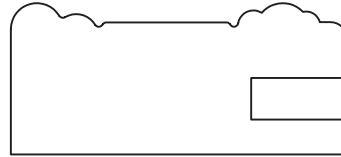


2575

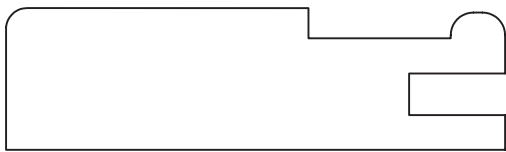

2600

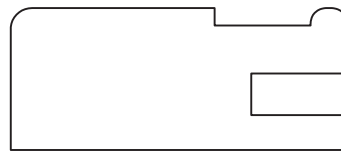


2675

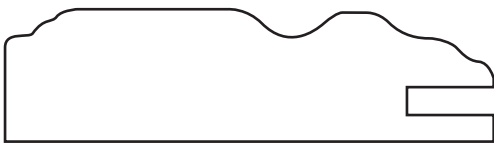


2700



2800

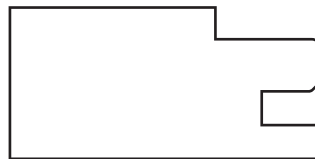

2875






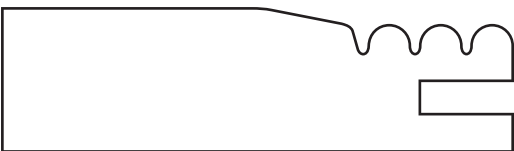


2900








2950

mouldings

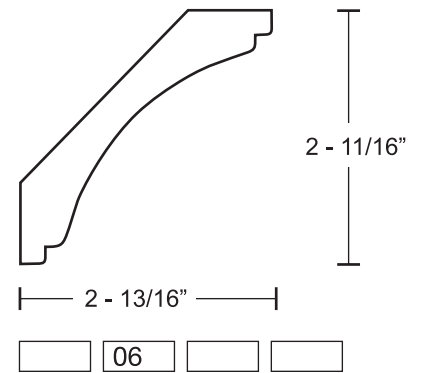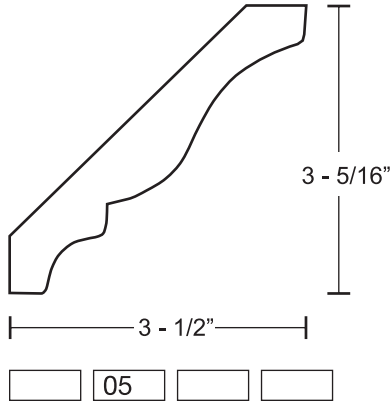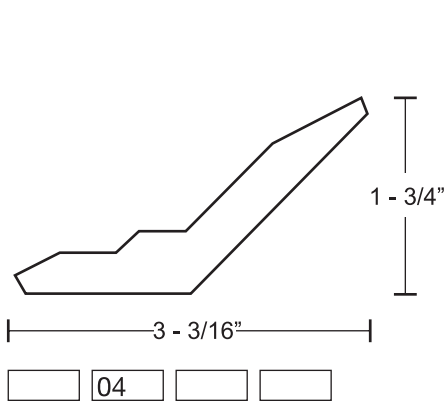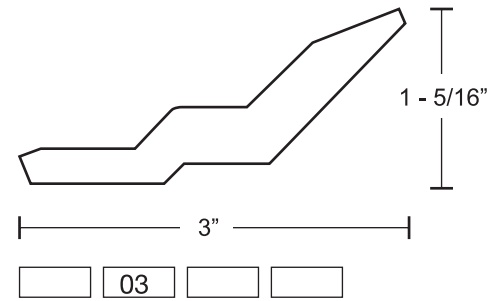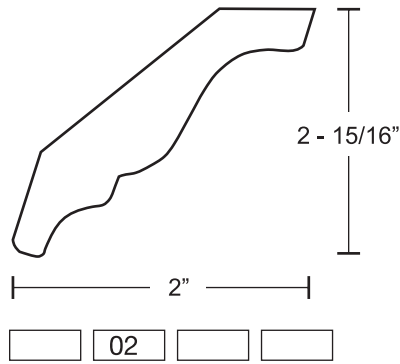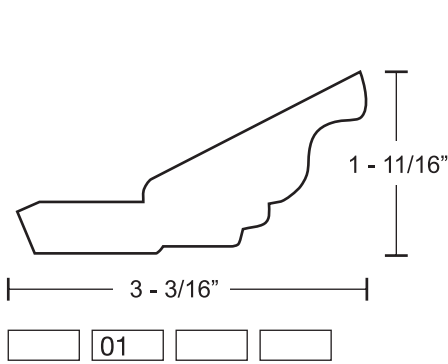


mouldings

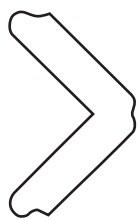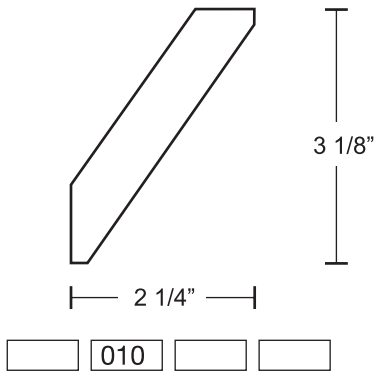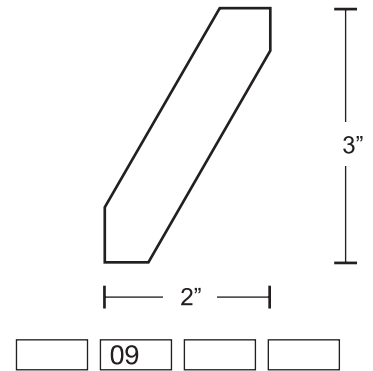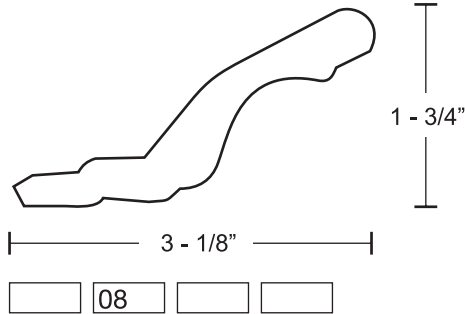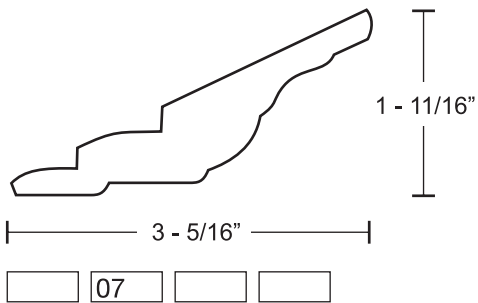

90° Corner



45° Corner



Batten

